


Basic config of NetAgentA LAN card


Before using the NetAgentA card, it must first be connected to the UPS and properly configured. Insert the **NetAgentA** card into the SNMP slot in the UPS and connect it to the Computer or LAN network using the RJ-45 cable (twisted-pair cable).

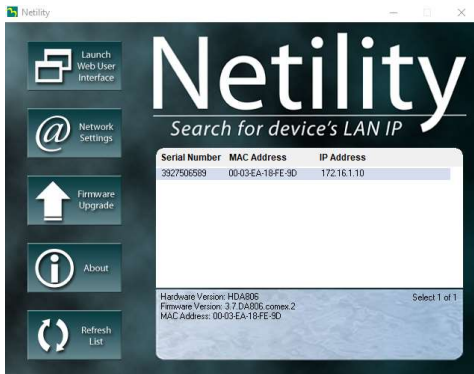

In order to configure the network parameters, we can use the **Netility** software, which we install on a computer with Microsoft Windows. The software is available on the webpage: <https://www.comex.com.pl/en/>, in the menu: **COVER Products -> SOFTWARE**

After running the **Netility** application, it will automatically start searching for the adapter in the LAN.

After detecting the card, using the **Network Settings** button set the IP address, subnet mask and the default gateway

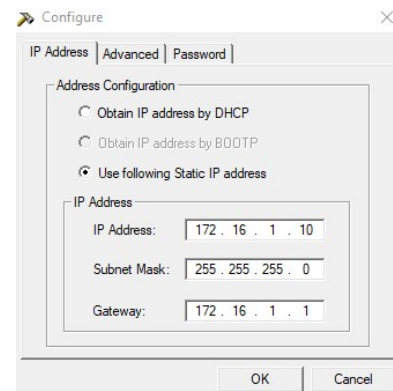

After setting network parameters, enter the IP address in the web browser, gaining access to the web interface.



The basic parameter that requires configuration is: **UPS Communication type Configuration -> UPS Configuration, UPS properties tab, parameter: UPS Communication Type**

Depending on the type of UPS, we set:

- Single-phase UPS: Megatec (this is the default value)
- Three-phase UPS: Megatec three-phase (3 in-3 out)